

4110-01-159-6922

Refrigerator, Mechanical, Blood Bank, Model 139875

[B-Before Operation, D-During Operation, A-After Operation, Q-Quarterly, and S-Semiannually]

ITEM NO	INTERVAL	ITEM TO BE INSPECTED AND PROCEDURE	IS NOT MISSION CAPABLE IF:
1	S	<p>Refrigerator</p> <p>a. Ensure that a copy of the manufacturer's manual is on hand.</p> <p>b. Inspect components, power cord, door gasket, etc. for damage, discoloration, and excessive wear.</p>	<p>The power cord is cracked, frayed or wires are not covered by the cord insulation.</p>
2	B	<p>Installation and Operation</p> <p>a. Installation of the refrigerator is conducted as directed by the manufacturer's literature.</p> <p>b. Use the two leveling screws behind the base grille, on the front of the unit, to level the refrigerator.</p> <p>c. Verify temperature of the refrigerator and freezer. Adjust temperature of refrigerator (lower section), allowing 24 hours for the temperature to settle before adjusting freezer section.</p> <p>d. Select the mode of operation for the freezer, either manual defrost or "frost free."</p> <p>CAUTION: NEVER CHANGE THE MODE FROM AUTOMATIC TO MANUAL WHEN THE EVAPORATOR FAN IS NOT RUNNING. EVAPORATOR FAN OPERATION CAN BE HEARD BY OPENING THE FREEZER DOOR.</p> <p>e. Ensure that the power cord of this instrument is equipped with a three-prong (grounding) plug which mates with a three-prong (grounding) wall receptacle. Do not use a two-prong adapter plug.</p>	<p>The refrigerator or freezer does not maintain set temperature.</p> <p>The grounding prong is missing from the plug.</p>
3	B, D	<p>Maintaining refrigerator</p> <p>a. Verify the temperature is maintained.</p> <p>b. Defrost the freezer when frost becomes ¼" to ½" thick or thicker in any area of the refrigerator.</p> <p>c. Cabinet cleaning</p> <p>(1) The interior should be cleaned frequently as directed by the manufacturer's literature.</p> <p>(2) The exterior of the cabinet should be cleaned occasionally as directed by the manufacturer's literature.</p>	<p>The refrigerator or freezer will not maintain set temperatures.</p>